


Room 127 Studio Instructions

Settings for Mixer

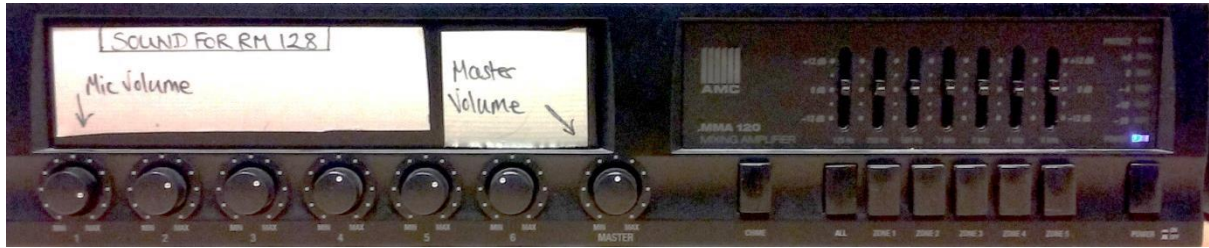

Leave Input 1
at about this
level

Use 'Master' to
control the
speaker volume

'All' button
should be
selected

Check that Power
is on

- Turn on DVD recorder and TV - After a short time you should see Room 128 on screen
- TV volume should be off
- Insert a blank recordable DVD

- **Check display on DVD recorder** indicates that DVD (not HDD) is selected →




- If display indicates 'HDD' press 'DRIVE SELECT' on the remote to select DVD: →



- Press the REC button to start recording:
- You can **confirm that DVD is recording** by looking at the display: →
- You can stop and restart recording at any time to create additional recordings



- When you have finished, press 'STOP'- wait a moment for the recording to be written to disc.
- When you eject the disc you will see the following message on screen →
- **Follow the instructions to finalise the disc** (press REC)
- Wait for finalising to complete, then EJECT the disc

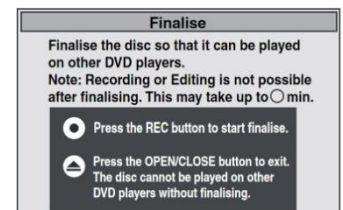

NO PICTURE?

- Check the input on the DVD recorder is set to 'AV 2' →



- If it does not, use the 'Input' button on the DVD remote to change this →



V2 Aug 18

Still having issues? (There is a phone in the library corridor – if you are using a Tavistock phone please only dial the 4-digit extension).

TELSupport@tavi-port.nhs.uk / 0208 938 2291 / 2293